

DMX TABELLA FOR MUSMOT2					
CHANNEL	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL
1	X MIRROR	proportional	proportional control of the X movement	0 / 100%	0 - 255
2	Y MIRROR	proportional	proportional control of the y movement	0 / 100%	0 - 255
3	GOBO	step	gobo1		0 - 18
		step	gobo2		19 - 37
		step	gobo3		38 - 56
		step	gobo4		57 - 75
		step	gobo5		76 - 94
		step	gobo6		95 - 113
		step	gobo7		114 - 132
		step	gobo8		133 - 151
		step	gobo9		152 - 170
		step	gobo10		171 - 189
		step	gobo rot.1		190 - 203
		step	gobo rot.2		204 - 215
		step	gobo rot.3		216 - 227
		step	gobo rot.4		228 - 239
		step	gobo rot.5		240 - 255
4	SHUTTER	step	closed		0 - 64
		step	open		65 - 128
		step	strobe speed 1	1,5Hz	129 - 142
		step	strobe speed 2	2Hz	143 - 156
		step	strobe speed 3	3Hz	157 - 170
		step	strobe speed 4	4Hz	171 - 184
		step	strobe speed 5	5Hz	185 - 198
		step	strobe speed 6	6Hz	199 - 212
		step	strobe speed 7	7Hz	213 - 226
		step	strobe speed 8	8Hz	227 - 240
		step	open		241 - 255
5	RESET		off		0 - 128
			on		129 - 255
NOTE 1 : dip-swiches 9 - 10 must be ON = MASTER					
NOTE 2 : dip-swiches 10 must be ON. = SLAVE					
NOTE 3 : dip-swiches 8 must be ON. = AUTOMAT WITH STROBO ( in master mode )					