

SCAN3 ROTO

DMX TABELLA FOR SHOW99 SCAN3 (ROTOGOBOS)							
CHANNEL	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL		
1	PAN (X mirror)	proportional	proportional control of the X movement	0 / 100%	0 - 255		
2	TILT (Y mirror)	proportional	proportional control of the y movement	0 / 100%	0 - 255		
3	ROTOGOBO	step	gobo1		0 - 24		
		step	gobo2		25 - 48		
		step	gobo3		49 - 72		
		step	gobo4		73 - 96		
		step	gobo5		97 - 120		
		step	gobo6		121 - 144		
		step	gobo7		145 - 192		
		step	spin1 slow		193 - 213		
		step	spin2 medium		214 - 234		
		step	spin3 fast		235 - 255		
4	COLOR	step	color 1 white		0 - 24		
		step	color 2 yellow		25 - 48		
		step	color 3 orange		49 - 72		
		step	color 4 red		73 - 96		
		step	color 5 cyan		97 - 120		
		step	color 6 green		121 - 144		
		step	color 7 light blue		145 - 168		
		step	color 8 dark blue		169 - 192		
		step	spin1 slow		193 - 213		
		step	spin2 medium		214 - 234		
		step	spin3 fast		235 - 255		
		5	SHUTTER	step	closed		0 - 64
				step	open		65 - 128
step	strobe speed 1			2Hz	129 - 142		
step	strobe speed 2			3Hz	143 - 156		
step	strobe speed 3			4Hz	157 - 170		
step	strobe speed 4			5Hz	171 - 184		
step	strobe speed 5			6Hz	185 - 198		
step	strobe speed 6			7Hz	199 - 212		
step	strobe speed 7			8Hz	213 - 226		
step	strobe speed 8			9Hz	227 - 240		
step	open				241 - 255		
6	GOBO ROT		HOLD		0 - 91		
			MAXIMUM SPEED	DIRECTION 1	92 - 97		
			CONTINUOUS GOBO ROTATION	DIRECTION 1	98 - 125		
			MINIMUM SPEED	DIRECTION 1	126 - 131		
			MINIMUM SPEED	DIRECTION 2	132 - 138		
			CONTINUOUS GOBO ROTATION	DIRECTION 2	139 - 167		
			MAXIMUM SPEED	DIRECTION 2	168 - 178		
			CONTINUOUS GOBO ROTATION	DIRECTION 2	179 - 207		
			MINIMUM SPEED	DIRECTION 2	208 - 213		
			MINIMUM SPEED	DIRECTION 1	214 - 220		
			CONTINUOUS GOBO ROTATION	DIRECTION 1	221 - 249		
			MAXIMUM SPEED	DIRECTION 1	250 - 255		
		6	PRIZM ROT		OFF		0 - 7
	MINIMUM SPEED				8 - 20		
	CONTINUOUS GOBO ROTATION				21 - 73		
	MAXIMUM SPEED				74 - 91		
	MEDIUM SPEED				92 - 173		
	OFF				174 - 255		
NOTE 1 : dip-switches 10 must be OFF = NORMAL DMX							
NOTE 2 : dip-switches 9 must be ON = DEMO							
NOTE 3 : dip-switches 8 must be ON = DEMO WITH SHUTTER							