

## **DEZELECTRIC Kft.**

### **Software modification on Cerebellum digi 1024 controller**

**v.7.3. – 2010.10.13**

For the new software version also available the new user manual. As always the modified parts are marked with other colors.

#### **Fixed:**

- ALL POSITION function is working. By pressing SHIFT + POSITION buttons all fixtures – not only the selected – will make the position function.
- The actual MACRO page number can be see on the display and on the monitor screen
- The WIPE ALL function also clear the DMX patch and slider 1-24 channel orders correctly.
- If making upgrade from earlier version as 7.0 to bigger then 7.0 then the contrast and backlight will not get bad values.
- SHIFT AUTO OFF function works correctly.
- Running shape in register can be stop by register button also if the actual selected page button empty.
- On the linked registers where shapes are saved also take out each other, not only programs
- Modify DMX address of an earlier patched fixture works correctly.

#### **What's new:**

- RESET, LAMP OFF, LAMP ON function also worked with SHIFT button together. In this case all fixtures will make the function, not only the selected fixtures.
- By pressing and hold pressed MUSIC button the JOG-1 name on the display will appear MUSIC text.
- By pressing and hold pressed LIGHT.O button the JOG-1 name on the display will appear LIGHT.O text.
- By pressing and hold pressed SHOW button the JOG-1 and JOG-2 name on the display will appear SHOWMIN and SHOWMAX text.
- After deleting fixtures from DMX PATCH the yet not used DMX channels value will be set automatically to 0.
- By numeric keypad also possible to set channel values
- The shape parameters can be set in more less way: between 0-255 only 5 rotation instead of 26
- Under changing shape parameters the actual parameter values can be see on the display.
- Shape moving direction can be set by the 4. JOG wheel.