

DRAGON 1

DMX TABELLA FOR PÁKÓ DRAGON 1 -SCAN2P1-					
CHANNEL	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL
5	PAN (X mirror)	proportional	proportional control of the X movement	0 / 100%	0 - 255
6	TILT (Y mirror)	proportional	proportional control of the y movement	0 / 100%	0 - 255
3	GOBO	step	gobo1		0 - 24
		step	gobo2		25 - 48
		step	gobo3		49 - 72
		step	gobo4		73 - 96
		step	gobo5		97 - 120
		step	gobo6		121 - 144
		step	gobo7		145 - 168
		step	gobo8		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
		step	spin3 fast		235 - 255
2	COLOR	step	color 1 white		0 - 24
		step	color 2 yellow		25 - 48
		step	color 3 orange		49 - 72
		step	color 4 red		73 - 96
		step	color 5 cyan		97 - 120
		step	color 6 green		121 - 144
		step	color 7 light blue		145 - 168
		step	color 8 dark blue		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
		step	spin3 fast		235 - 255
4	SHUTTER	step	closed		0 - 64
		step	open		65 - 128
		step	strobe speed 1	2Hz	129 - 142
		step	strobe speed 2	3Hz	143 - 156
		step	strobe speed 3	4Hz	157 - 170
		step	strobe speed 4	5Hz	171 - 184
		step	strobe speed 5	6Hz	185 - 198
		step	strobe speed 6	7Hz	199 - 212
		step	strobe speed 7	8Hz	213 - 226
		step	strobe speed 8	9Hz	227 - 240
		step	open		241 - 255
1	SPIN	step	STOP		0 - 10
		step	CONTINUE INCREASE		11 - 255
NOTE 1 : dip-switches (10 PIN) 10 must be OFF = AUTOMAT MODE NORMAL DMX OR MINI ULTRA					
NOTE 2 : dip-switches (10 PIN) 10 must be ON = NORMAL DMX					
NOTE 3 : dip-switches (4 PIN) 1 must be ON = PAN INVERZ MODE (X MIRROR)					
NOTE 4 : dip-switches (4 PIN) 2 must be ON = TILT INVERZ MODE (Y MIRROR)					
NOTE 5 : dip-switches (4 PIN) 3 must be ON = PAN/TILT SWAP					
NOTE 6 : dip-switches (4 PIN) 4 must be ON = DEMO MODE / AUTOMAT /					