

DRAGON 2

DMX TABELLA FOR PÁKÓ DRAGON 2 -SCAN2P2-					
CHANNEL	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL
5	PAN (X mirror)	proportional	proportional control of the X movement	0 / 100%	0 - 255
6	TILT (Y mirror)	proportional	proportional control of the y movement	0 / 100%	0 - 255
3	GOBO	step	gobo1		0 - 24
		step	gobo2		25 - 48
		step	gobo3		49 - 72
		step	gobo4		73 - 96
		step	gobo5		97 - 120
		step	gobo6		121 - 144
		step	gobo7		145 - 168
		step	gobo8		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
step	spin3 fast		235 - 255		
7	GOBO ROT.	step	HOLD		0 - 25
		step	CONTINUOUS GOBO ROTATION	DIRECTION 1	26 - 127
		step	HOLD		128 - 152
		step	CONTINUOUS GOBO ROTATION	DIRECTION 2	153 - 255
2	COLOR	step	color 1 white		0 - 24
		step	color 2 yellow		25 - 48
		step	color 3 orange		49 - 72
		step	color 4 red		73 - 96
		step	color 5 cyan		97 - 120
		step	color 6 green		121 - 144
		step	color 7 light blue		145 - 168
		step	color 8 dark blue		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
		step	spin3 fast		235 - 255
		4	SHUTTER	step	closed
step	open				65 - 128
step	strobe speed 1			2Hz	129 - 142
step	strobe speed 2			3Hz	143 - 156
step	strobe speed 3			4Hz	157 - 170
step	strobe speed 4			5Hz	171 - 184
step	strobe speed 5			6Hz	185 - 198
step	strobe speed 6			7Hz	199 - 212
step	strobe speed 7			8Hz	213 - 226
step	strobe speed 8			9Hz	227 - 240
step	open				241 - 255
1	SPIN	step	STOP		0 - 10
		step	CONTINUE INCREASE		11 - 255
8	RESET	step	ON	ON	255
NOTE 1 : dip-switches (10 PIN) 10 must be OFF = AUTOMAT MODE NORMAL DMX OR MINI ULTRA					
NOTE 2 : dip-switches (10 PIN) 10 must be ON = NORMAL DMX					
NOTE 3 : dip-switches (4 PIN) 1 must be ON = PAN INVERZ MODE (X MIRROR)					
NOTE 4 : dip-switches (4 PIN) 2 must be ON = TILT INVERZ MODE (Y MIRROR)					
NOTE 5 : dip-switches (4 PIN) 3 must be ON = PAN/TILT SWAP					
NOTE 6 : dip-switches (4 PIN) 4 must be ON = DEMO MODE / AUTOMAT /					