

DMX TABELLA FOR SATURNSCAN 3					
	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL
1	X mirror	proportional	proportional control of the X movement	0 / 100%	0 - 255
2	Y mirror	proportional	proportional control of the y movement	0 / 100%	0 - 255
3	GOBO	step	gobo1		0 - 23
		step	gobo2		24 - 47
		step	gobo3		48 - 71
		step	gobo4		72 - 95
		step	gobo5		96 - 119
		step	gobo6		120 - 143
		step	gobo7		144 - 167
		step	gobo8		168 - 191
		step	rot1		192 - 203
		step	rot2		204 - 215
		step	rot3		216 - 227
		step	rot4		228 - 239
		step	rot5		240 - 255
4	COLOR	step	open		0 - 23
		step	citrom		24 - 47
		step	zöld		48 - 71
		step	piros		72 - 95
		step	kék		96 - 119
		step	narancs		120 - 143
		step	ciklámen		144 - 167
		step	türkiz		168 - 191
		step	rot1		192 - 203
		step	rot2		204 - 215
		step	rot3		216 - 227
		step	rot4		228 - 239
		step	rot5		240 - 255
5	RESET	step	off		0 - 127
		step	on		128 - 255
6	SHUTTER	step	closed		0 - 64
		step	open		65 - 128
		step	strobe speed 1	1Hz	129 - 142
		step	strobe speed 2	2Hz	143 - 156
		step	strobe speed 3	3Hz	157 - 170
		step	strobe speed 4	4Hz	171 - 184
		step	strobe speed 5	5Hz	185 - 198
		step	strobe speed 6	6Hz	199 - 212
		step	strobe speed 7	7Hz	213 - 226
		step	strobe speed 8	8Hz	227 - 240
		step	open		241 - 255
7	NOT USED				
8	PRISMA	step	off		0-6,5-0
		step	on		7-15,15-6
		proportional	rot		16-255,255-16
9	ROTO-GOBO	step	stop		0-6
		step	max speed left		7-36
		proportional	slow left		37-127
		step	stop		128-152
		proportional	accelerate right		153-249
		step	max speed right		250-255
10	FROST	step	off		0 - 128,127-0
		step	on		129 - 255,255-128
NOTE 1 : all dip-switches must be ON = TEST MODE					
NOTE 2 : dip-switches 2,3,4,5,6,7,8,9,10 must be ON, and dip-switches 1 must be OFF = SERVICE MODE					
NOTE 3 : dip-switches 9,10 must be ON = MASTER MODE					
NOTE 4 : dip-switches 8,9,10 must be ON = MASTER MODE with STROBE					
NOTE 5 : dip-switches 10 must be ON = SLAVE MODE					