

SCAN2 PRO v.2.

DMX TABELLA FOR SCAN2PRO					
CHANNEL	FUNKCION	TYPE OF CONTROL	EFFECT	PERCENT	DECIMAL
1	PAN (X mirror)	proportional	proportional control of the X movement	0 / 100%	0 - 255
2	TILT (Y mirror)	proportional	proportional control of the y movement	0 / 100%	0 - 255
3	GOBO	step	gobo1		0 - 24
		step	gobo2		25 - 48
		step	gobo3		49 - 72
		step	gobo4		73 - 96
		step	gobo5		97 - 120
		step	gobo6		121 - 144
		step	gobo7		145 - 168
		step	gobo8		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
		step	spin3 fast		235 - 255
4	COLOR	step	color 1 white		0 - 24
		step	color 2 yellow		25 - 48
		step	color 3 orange		49 - 72
		step	color 4 red		73 - 96
		step	color 5 cyan		97 - 120
		step	color 6 green		121 - 144
		step	color 7 light blue		145 - 168
		step	color 8 dark blue		169 - 192
		step	spin1 slow		193 - 213
		step	spin2 medium		214 - 234
		step	spin3 fast		235 - 255
5	SHUTTER	step	closed		0 - 64
		step	open		65 - 128
		step	strobe speed 1	1Hz	129 - 142
		step	strobe speed 2	2Hz	143 - 156
		step	strobe speed 3	3Hz	157 - 170
		step	strobe speed 4	4Hz	171 - 184
		step	strobe speed 5	5Hz	185 - 198
		step	strobe speed 6	6Hz	199 - 212
		step	strobe speed 7	7Hz	213 - 226
		step	strobe speed 8	8Hz	227 - 240
		step	open		241 - 255
6	PRIZM ROT		<i>OFF</i>		0 - 41
			<i>CONTINOUS PRIZM ROTATION</i>		42 - 255
7	GOBO ROT		<i>HOLD</i>		0 - 25
			<i>CONTINOUS GOBO ROTATION</i>	<i>DIRECTION 1</i>	26 - 127
			<i>HOLD</i>		128 - 152
			<i>CONTINOUS GOBO ROTATION</i>	<i>DIRECTION 2</i>	153 - 255
8	RESET	step	OFF		0 - 127
		step	ON		128 - 255
NOTE 1 : dip-switches 9 must be ON = DEMO					
NOTE 2 : dip-switches 8 must be ON = DEMO WITH SHUTTER					
The dipswitch beside the microcontroller function mode: !!!!					
NOTE : dip-switches (4 PIN) 1 must be OFF =NORMAL GOBO (PIN 2,3,4 OFF)					
NOTE : dip-switches (4 PIN) 1 must be ON = ROTO GOBO (PIN 2,3,4 =OFF)					